

Work Order ID 149821***149821***

Page 1

Wednesday, August 03, 2016 1:26:36 PM

Item ID: D206-642-561PHI Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float Compatible
Start Date: 7/5/2016 Start Qty: 1.00 ***1*** Cust Item ID:
Required Date: 8/3/2016 Req'd Qty: 1.00 ***1*** Customer:

Reference:

Approvals: Process Plan: **DAS 21** Date: **AUG 04 2016** Tooling: Date: Run Start ***NR1***
QC: **9-89** Date: SPC (Y/N): Date: Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Per Hour	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
D3274-045	G								
DSI 9749	A								
100	Document Control	0.00						DAS 21 9-89	
100									
DC	Memo	0.00							
Doc.Control -USB or Paperwork	Photocopy bluefile and create labels per PPP D206-642-561 CHG001								

N/A**SEP 2 9 2016**

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :				MRB (QS1042) Approval Completed By _____ Lead hand / Supervisor Approval Verification _____ QC / QA Coordinator Approval _____	
Description Work Order Deviation				Disposition					
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐							
		OTHER : _____							

Work Order ID 149821

Wednesday, August 03, 2016 1:26:36 PM

149821

Page 2

Item ID: D206-642-561PHI**Accept*****N900040100*****Setup Start *NS1*****Revision ID:****Stop *NS2*****Item Name:** Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float Compatible**Start Date:** 7/5/2016 **Start Qty:** 1.00 ***1*****Cust Item ID:****Required Date:** 8/3/2016 **Req'd Qty:** 1.00 ***1*****Customer:****Reference:****Approvals:** **Process Plan:** **Date:** **Tooling:** **Date:****Run Start *NR1*****QC:** **Date:** **SPC (Y/N):** **Date:****Stop *NR2*****Sequence ID/**
Work Center ID
110**Operation**
Description**Set Up/**
Down Time
0.00**Tool ID****Tool #** **Plan**
Code**Accept**
Qty**Reject**
Qty**Reject**
Number**Insp.**
Stamp***110***

Skidtubes

Skidtubes

Skidtubes

Memo

0.12

****VERIFY AND INSPECT THE MATERIAL PRIOR TO USE****

1- remove fwd indexing ridge as per dwg D3274. Prepare for welding

2- weld fwd cap as per dwg D3274 and OSI004

AR Aluminum Rod Batch: M134826

3- grind fwd cap weld on top surface only

4- Cut AFT end of tube at 170.9" as per dwg D3274 and deburr end.

5-Drill Aft cap pilot hole using DT8025

6 -Cleco DT8025 in position and install pilot hole drill Jig DT8742A,B,C,D and DT8742. Drill 3/16" pilot holes as per Dwg D3274

7 -Remove inner indexing ridge on aft end of skidtube as per Dwg D3274 scribe batch #

8 -Open aft end cap holes to Ø0.208" as per Dwg D3274. Deburr aft end.

16-8-15 ALH

16-8-15

16-8-15 HLG/ALH

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :				MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Description Work Order Deviation				Disposition					
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐							
		OTHER : ☐							

Wednesday, August 03, 2016 1:26:36 PM

1 49821

Page 3

N900040100

Setup Start *NS1*

Stop ***NS2***

Stop ***NS2***

Customer:

Run Start *NR1*

Stop *NR2*

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

[illegible]

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation			Disposition		
			Completed By		
			Lead hand / Supervisor Approval Verification		
			QC / QA Coordinator Approval		
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐			FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐		
OTHER :					

Work Order ID 149821

Wednesday, August 03, 2016 1:26:36 PM

149821

Page 4

Item ID: D206-642-561PHI Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float Compatible
Start Date: 7/5/2016 Start Qty: 1.00 *1* Cust Item ID:
Required Date: 8/3/2016 Req'd Qty: 1.00 *1* Customer:
Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Down Hours	Tool ID	Tool #	Plan Qty	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
130	QC7-Inspect Chemical Conversion Coat	0.00			DAS				
130					19				
QC	Memo	0.00			9-89				

Quality Control

150

150

Skidtubes

Skidtubes

Skidtubes

Memo

0.14

1-Open Ø0.313" and 0.375" crossbolt spacer holes as per Dwg D3274

2-Deburr crossbolt spacer holes as per Dwg D3274 and blow out chips from inside the tube

3-Bond web in place as per Dwg D3274 & QSI 015.

A/RSikaflex-291

Sikaflex expire date: **17-2-16**Start: **16-8-24** Time: _____

Finish: _____ Time: _____

(Adhere for 12 hours)

16-8-19 M.G.
16-8-24 M.G.

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval		
Description Work Order Deviation				Disposition					
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐							
OTHER : ☐									

Work Order ID 149821

Wednesday, August 03, 2016 1:26:36 PM

149821

Page 5

Item ID: D206-642-561PHI**Accept*****N900040100*****Setup Start *NS1*****Revision ID:****Item Name:** Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float Compatible**Stop *NS2*****Start Date:** 7/5/2016 **Start Qty:** 1.00 ***1*****Cust Item ID:****Required Date:** 8/3/2016 **Req'd Qty:** 1.00 ***1*****Customer:****Reference:****Approvals:** **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____**Run Start *NR1*****QC:** _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____**Stop *NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Down Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	-----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

DAS
18
9-89***160***

QC

Memo

0.00

Quality Control

1 0 1608-25 JH

170

0.01

170

Skidtubes

Skidtubes

Memo

0.11

Skidtubes

1-Bend AFT end of tube using bend prog. D3274 AFT as per dwg D3274. Install drop pins in crossbolt spacer holes to maintain web position.

2- DRILL PILOT HOLES ***ONLY FOR WEARPADS*** USING D3274-1T2 RED SECTIONS, ** SEE PAGE 4**
OPEN HOLES TO .297" . Deburr

3- Countersink crossbolt spacer holes as per Dwg D3274

4- Prepare for welding

16-8-26 JH
DP2
16-8-29 M.G. JH

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :				MRB (QSI042) Approval	
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐				
		OTHER : ☐							

Work Order ID 149821

Wednesday, August 03, 2016 1:26:36 PM

149821

Page 6

Item ID: D206-642-561PHI Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float
 Start Date: 7/5/2016 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 8/3/2016 Req'd Qty: 1.00 ***1*** Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp	DAS 18 8-60
180 *180* QC Quality Control	QC5- Inspect part completeness to step on W/O Memo	0.00 0.00				7	0	16-08-30		
190 *190* Skidtubes Skidtubes	Skidtubes Memo 1-Insert D2649 & D3275-1 crossbolt spacers. Weld as per QSI 004 and Dwg D3274. Remember to back drill each hole before welding the other side. Use aluminum rod A/RAluminum Rod <u>m131562</u> 3-Grind cross bolt welds flush as per Dwg D3274. ***INSPECT FOR PIN HOLES IN WELD*** 4-Counterbore 5/16" x 0.750" deep as per Dwg D3274 and deburr.	0.00 0.19				1	0	BE 16-08-30 16-8-30 HLGJH 16-9-2 JH		

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coor. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QS1042) Approval	
Description Work Order Deviation		Disposition		Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Work Order ID 149821

Wednesday, August 03, 2016 1:26:36 PM

149821

Page 7

Item ID: D206-642-561PHI **Accept** ***N900040100*** **Setup** **Start** ***NS1***
Revision ID:
Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float **Stop** ***NS2***
Start Date: 7/5/2016 **Start Qty:** 1.00 ***1*** **Cust Item ID:**
Required Date: 8/3/2016 **Req'd Qty:** 1.00 ***1*** **Customer:**
Reference:

Approvals: **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____ **Run** **Start** ***NR1***
QC: _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____ **Stop** ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Down Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
200	QC5- Inspect part completeness to step on W/O	0.00							
200									
QC	Memo	0.00							DAS 9 9-89
Quality Control									
210	QC10- Inspect visual per QSI004- ground welds	0.00							
210									
QC	Memo	0.00							DAS 9 9-89
Quality Control									
220	Pressure Wash per QSI005 4.3	0.00							
220									
HandFinish	Memo	0.09							
Hand Finishing	Re-alodine tube as per QSI 005 section 4.1.2.1 **Do not acid etch**								(N) / 2016/09/06 BEB

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation			Disposition		
			Completed By		
			Lead hand / Supervisor Approval Verification		
			QC / QA Coordinator Approval		
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

149821

Wednesday, August 03, 2016 1:26:36 PM

N900040100

Setup Start *NS1*

Stop *NS2*

Stop *NS2*

Customer:

Run Start *NR1*

Stop ***NR2***

Stop ***NR2***

230

1 _____  22.09.16

1- PRIME INSIDE AND OUT AS PER DWG AND QSI 005 4.2.1.3.3
PRIMER PRC DESOTO 515X349 BATCH: 135445

2- PAINT BLACK AS PER DWG AND QSI 005 4.2.2 USING CA8213/F3738
CAMOFLAGE BLACK
PAINT BATCH: 13533

DAS 16

240

15
9-89

Quality Control

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition			
				Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Work Order ID 149821

Wednesday, August 03, 2016 1:26:36 PM

149821

Page 9

Item ID: D206-642-561PHI **Accept** ***N900040100*** **Setup Start** ***NS1***
Revision ID: **Stop** ***NS2***
Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float
Start Date: 7/5/2016 **Start Qty:** 1.00 ***1*** **Cust Item ID:**
Required Date: 8/3/2016 **Req'd Qty:** 1.00 ***1*** **Customer:**
Reference:

Approvals: **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____ **Run Start** ***NR1***
QC: _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____ **Stop** ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Prep Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
244 *244* HandFinish Hand Finishing	Wing Walk as per dwg QSI005 4.4 Batch <u>M1355006</u> Memo APPLY WING WALK WHERE INDICATED ON SHEET 4, AND ALSO FRONT CAP	0.07				<u>1x</u>	<u>0</u>	<u>160820</u>	
246 *246* QC Quality Control	QC3- Inspect Part Finish Memo	0.00 0.00						<u>16.09.26</u>	
250 *250* HandFinish Hand Finishing	HandFinishing Memo 1-Install Nut Plate as per Dwg D3274. Apply LPS-PROCYON to Nut Plate and rivets. A/RN/ALPS-PROCYON <u>M132690</u> 2-Install inserts as per Dwg D3274. Use a drop of Sikaflex inside insert holes a A/RSikaflex-291 <u>M135234</u> Sikaflex expire date: <u>76104</u>	0.00 0.15				<u>1x</u>	<u>0</u>	<u>160820</u>	

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation			Disposition		
			Completed By		
			Lead hand / Supervisor Approval Verification		
			QC / QA Coordinator Approval		
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐			FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐		
OTHER :					

Work Order ID 149821

Wednesday, August 03, 2016 1:26:36 PM

149821

Page 10

Item ID: D206-642-561PHI **Accept** ***N900040100*** **Setup** **Start** ***NS1***
Revision ID:
Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float **Stop** ***NS2***
Start Date: 7/5/2016 **Start Qty:** 1.00 ***1*** **Cust Item ID:**
Required Date: 8/3/2016 **Req'd Qty:** 1.00 ***1*** **Customer:**
Reference:

Approvals: **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____ **Run** **Start** ***NR1***
QC: _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____ **Stop** ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
260	QC5- Inspect part completeness to step on W/O	0.00							
260									
QC	Memo	0.00							
Quality Control	Inspect Nut Plate & Inserts								

DAS
38
8-89
SEP 28 2016

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :				MRB (QSI042) Approval 	
Description Work Order Deviation				Disposition					
								Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	

Root Cause				FAULT CATEGORY							
Environment	☐	No Re-verification	☐	Pressure/Forced	☐	Temperature/Cure	☐	Power Loss/Surge	☐	Positioned Wrong	☐
Design	☐	Operator	☐	Bending	☐	Set-up	☐	Folio/Program	☐	Outside Dimensions	☐
Doc/Data	☐	Offset/Setup	☐	Centre Not Concentric	☐	BOM/Route	☐	Grain	☐	Over/Under tolerance	☐
Equip/Tooling	☐	Supplier	☐	Cracks	☐	Broken/Damage/Defect	☐	Weld	☐	Part Incorrect	☐
Handling/Pre	☐	Training	☐	Crimp/Kink/Ripple/Wave	☐	Inspection Incomplete/Unqualified	☐	Wrong Stock Pulled	☐	Part Lost/Missing	☐
Material	☐	Use for Testing	☐	Cuffs	☐	Contamination	☐	Out of Sequence	☐	Part Moved	☐
Internal Transport	☐	Poor Information	☐	Crushing	☐	Countersink	☐	Off-set	☐	Drawing	☐
Tribal Knowledge	☐	Rushing	☐	Heat Treat	☐	Cut Too Short	☐	Mislabeled	☐	Finish	☐
LOA	☐	Product Improvement	☐	Wave/Twist in Tube	☐	Instructions Incomplete/Unclear	☐	Fit/Function	☐	Misread	☐
Substation	☐	Process Improvement	☐	Marks/Chatter	☐	Drill Holes	☐	Misaligned/off center	☐	Turning Sequence	☐
Past Expiry Date	☐	Manufacturing Process	☐	OTHER : _____							
Misidentified	☐	Past Due	☐								

Work Order ID 149821

Wednesday, August 03, 2016 1:26:36 PM

149821

Page 11

Item ID: D206-642-561PHI **Accept** ***N900040100*** **Setup Start *NS1***
Revision ID: **Stop *NS2***
Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float Compatible
Start Date: 7/5/2016 **Start Qty:** 1.00 ***1*** **Cust Item ID:**
Required Date: 8/3/2016 **Req'd Qty:** 1.00 ***1*** **Customer:**
Reference:

Approvals: **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____ **Run Start *NR1***
QC: _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____ **Stop *NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
270	HAND FINISHING RESOURCE #1	0.00							
270	HandFinish	0.17							
Hand Finishing	Memo 1- Apply coat of rockguard to skidtube where wearpads are installed as per note 14 and sheet 4. ***LET CURE BEFORE INTALLING WEARPADS*** Rockguard batch: <u>M135064</u> <u>BEB</u> 2-Install wearpads as per Dwg D3274. 3-Inspect for foreign objects as per QSI 024 4-Install Aft Cap and seal with Sikaflex. Clean excess adhesive. A/RSikaflex-291 <u>11135234</u> Sikaflex expire date: <u>16109</u> 5- Fill gap with sikaflex as per dwg sheet 6, Detail L A/RSikaflex-291 <u>11135234</u> Sikaflex expire date: <u>16109</u>								

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval 		
Description Work Order Deviation				Disposition					
							Completed By		
							Lead hand / Supervisor Approval Verification		
							QC / QA Coordinator Approval		

Root Cause				FAULT CATEGORY			
Environment ☐	☐ No Re-verification	Pressure/Forced ☐	☐ Temperature/Cure	☐ Power Loss/Surge	☐ Positioned Wrong		
Design ☐	☐ Operator	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐		
Doc/Data ☐	☐ Offset/Setup	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐		
Equip/Tooling ☐	☐ Supplier	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐		
Handling/Pre ☐	☐ Training	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐		
Material ☐	☐ Use for Testing	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐		
Internal Transport ☐	☐ Poor Information	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐		
Tribal Knowledge ☐	☐ Rushing	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐		
LOA ☐	☐ Product Improvement	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐		
Substation ☐	☐ Process Improvement	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐		
Past Expiry Date ☐	☐ Manufacturing Process	OTHER : _____					
Misidentified ☐	☐ Past Due						

Work Order ID 149821

Wednesday, August 03, 2016 1:26:36 PM

149821

Page 12

Item ID: D206-642-561PHI **Accept** ***N900040100*** **Setup Start** ***NS1***
Revision ID: **Stop** ***NS2***
Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float Compatible
Start Date: 7/5/2016 **Start Qty:** 1.00 ***1*** **Cust Item ID:**
Required Date: 8/3/2016 **Req'd Qty:** 1.00 ***1*** **Customer:**
Reference:

Approvals: **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____ **Run Start** ***NR1***
QC: _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____ **Stop** ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
280 *280* QC Quality Control	QC5- Inspect part completeness to step on W/O Memo	0.00 0.00				—	—	—	38 9-89 SEP 28 2016
290 *290* Packaging Packaging	Memo Identify and pack for shipping as per PPP D206-642-561 Location: _____ PPP Rev: _____	0.00 0.00							DAS 28 9-89 SEP 28 2016
300 *300* QC Quality Control	QC21- Final Inspection - Work Order Release Memo	0.00 0.02							DAS 21 9-89 SEP 28 2016 sem 10/09/28

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation			Disposition		
			Completed By		
			Lead hand / Supervisor Approval Verification		
			QC / QA Coordinator Approval		
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐			FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐		
OTHER : ☐					

Picklist Print

Wednesday, August 03, 2016 1:26:36 PM

Page 1

Work Order ID: 149821

149821

Parent Item: D206-642-561PHI

D206-642-561PHI

Parent Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float Compatible

Start Date: 7/5/2016

Required Date: 8/3/2016

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV REV:A 16.07.19 NEW ISSUE DD VERF:JFS

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D3537-11		Manufactured	No				Each	15.0000		1			
D3537-11									**			lll 16/09/20	
Wearpad													

Location	Loc Qty	Loc Code
----------	---------	----------

FP001	14	
145184	14	
prelim	1	
137963	1	

D3274-041BENT		Manufactured	No				Each	1.0000		1			
D3274-041BENT									**			16-8-11 JH	
Skidtube Assembly 206													

Location	Loc Qty	Loc Code
----------	---------	----------

LG001	1	
135462	1	

D2646PHI		Manufactured	No				Each	2.0000		1			
D2646PHI									**			lll 16/09/20	
Aft Cap													

Location	Loc Qty	Loc Code
----------	---------	----------

FP001	2	
147128	2	

D2649		Manufactured	No				Each	178.0000		12			
D2649									**			lll 16/08/29	
Cross Bolt Spacer													

Location	Loc Qty	Loc Code
----------	---------	----------

LG001	178	
136243	74	
146930	104	

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date : _____	Step #: _____	QTY Effective : _____		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Picklist Print

Wednesday, August 03, 2016 1:26:36 PM

Page 2

Work Order ID: 149821

149821

Parent Item: D206-642-561PHI

D206-642-561PHI

Parent Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag
Float Compatible

Start Date: 7/5/2016

Required Date: 8/3/2016

D3275-1

Manufactured No

Each

Start Qty: 1.00
162.0000

12

D3275-1

Cross Bolt Spacer

**

8/16/08/27

Location

Loc Qty

Loc Code

LG001

162

146967

121

147604

41

12

D3282-041

Manufactured No

Each

10.0000

1

D3282-041

Float Web (206L/407)

**

16-8-24 MG

Location

Loc Qty

Loc Code

LG002

10

139567

10

1

D3285-1

Manufactured No

Each

15.0000

1

D3285-1

Cap

**

8/16/08/15

Location

Loc Qty

Loc Code

LG001

15

126290

15

1

D3415-041PHI

Manufactured No

Each

9.0000

1

D3415-041PHI

Nut Plate

**

all 16/09/27

Location

Loc Qty

Loc Code

FP001

9

147137

9

21

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date : _____	Step #: _____	QTY Effective : _____		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : _____					

Picklist Print

Wednesday, August 03, 2016 1:26:36 PM

Page 3

Work Order ID: 149821

149821

Parent Item: D206-642-561PHI

D206-642-561PHI

Parent Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag
Float Compatible

Start Date: 7/5/2016

Required Date: 8/3/2016

D3537-9

Manufactured No

Each

Start Qty: 1.00
70.0000 9

Required Qty: 1.00

D3537-9

Wearpad

lll 16/06/17

Location

Loc Qty

Loc Code

FP001

69

145183

69

x9

prelim

1

137962

1

2

D3672-1

Manufactured No

Each

820.0000

D3672-1

Washer, Phenolic

lll 16/06/17

Location

Loc Qty

Loc Code

FG

10

85222

10

FP001

454

112218

4

134785

450

x2

ST049

356

147077

356

ALS4-1032-130

AELS4-1032-130 Purchased

No

Each

1,421.000

40

ALS4-1032-130

Rivnut

lll 16/06/17

Location

Loc Qty

Loc Code

FP001

519

M133077

122

M134502

397

x46

ST556

902

M134502

902

Wednesday, August 03, 2016 1:26:36 PM

Shop Packet Print

Page 3

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐																																																													
Date :		Step #:		QTY Effective :				MRB (QSI042) Approval																																																									
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval																																																									
Root Cause		FAULT CATEGORY																																																															
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐	Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐	Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐	Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐	Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐	Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐	Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐	Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐	LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐	Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐	Past Expiry Date ☐	Manufacturing Process ☐	OTHER :			
Misidentified ☐	Past Due ☐																																																																

Picklist Print

Wednesday, August 03, 2016 1:26:36 PM

Page 4

Work Order ID: 149821

149821

Parent Item: D206-642-561PHI

D206-642-561PHI

Parent Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag
Float Compatible

Start Date: 7/5/2016

Required Date: 8/3/2016

AN3C4A

Purchased

No

Each

Start Qty: 1.00
1,728.000

Required Qty: 1.00
42

AN3C4A

Bolt

**

16/09/27

Location	Loc Qty	Loc Code
FG	20	
122814	20	
FP001	408	
M133440	7	
M134396	41	
M134509	6	
M134606	29	
M134676	44	
M134762	106	
M134861	13	
M135127	22	
M135297	140	
OVER002	1200	
M135058	1200	
ST350	100	
M132317	3	
M134134	18	
M134396	79	

NAS1149C0463R

Purchased

No

Each

285.0000

1

NAS1149C0463R

Washer

**

16/09/27

Location	Loc Qty	Loc Code
FP001	66	
m127306	66	
ST260a	200	
m134167	200	
ST266	19	
m133077	19	

Wednesday, August 03, 2016 1:26:36 PM

Shop Packet Print

Page 4

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation			Disposition		
			Completed By		
			Lead hand / Supervisor Approval Verification		
			QC / QA Coordinator Approval		
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐			FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐		
OTHER : ☐					

Picklist Print

Wednesday, August 03, 2016 1:26:36 PM

Page 5

Work Order ID: 149821

149821

Parent Item: D206-642-561PHI

D206-642-561PHI

Parent Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag
Float Compatible

Start Date: 7/5/2016

Required Date: 8/3/2016

NAS1149C0332R

Purchased

No

Each

Start Qty: 1.00
4,108.000

42

Required Qty: 1.00

NAS1149C0332R
WASHER

ll 16109127

Location

Loc Qty

Loc Code

FP001

918

m135046

918

GA

141

m133284

141

ST266

3049

m134736

1049

m135274

2000

x42

CCR264SS3-3

CCR264SS-3-03

Purchased

No

Each

139.0000

2

CCR264SS3-3
Cherry Rivet

ll 16109127

Location

Loc Qty

Loc Code

FP001

139

m128818

139

CR3212-4-03

Purchased

No

Each

254.0000

2

CR3212-4-03
Cherry Rivet

ll 16109127

Location

Loc Qty

Loc Code

CCK005

100

m134943

100

FP001

37

m126320

37

ST320

117

119017

117

x2

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition			
				Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Picklist Print

Wednesday, August 03, 2016 1:26:36 PM

Page 6

Work Order ID: 149821

149821

Parent Item: D206-642-561PHI

D206-642-561PHI

Parent Item Name: Replacement Skidtube, High Gear, Standard Wearplates, DART (Apical) Tri-Bag
Float Compatible

Start Date: 7/5/2016

Required Date: 8/3/2016

MS27039C4-06

Purchased

No

Each

Start Qty: 1.00
36.0000

1

Required Qty: 1.00

MS27039C4-06
SCREW

el 16/09/27

Location

Loc Qty

Loc Code

ST274

36

m134889

36

X1

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coor. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
		OTHER : ☐			

Qty -041	Qty -043	Qty -045	Part Number	Description
X			D3274-041	SKIDTUBE ASSEMBLY
	X		D3274-043	SKIDTUBE ASSEMBLY
		X	D3274-045	SKIDTUBE ASSEMBLY (FOR PHI)
1	1	1	D2600-1-240	EXTRUSION
1	1	1	D2646	AFT CAP
12	12	12	D2649	CROSS BOLT SPACER
12	37	12	D3275-1	CROSS BOLT SPACER
1	1	1	D3282-041	FLOAT WEB
1	1	1	D3285-1	CAP
1	1	1	D3413-1	RING
1	1	1	D3415-041	NUT PLATE
9	9		D3537-1	WEARPAD
		1	D3537-11	WEARPAD
1	1		D3537-3	WEARPAD
		9	D3537-9	WEARPAD
2	2	2	D3672-1	WASHER
1	1		D4956-15	WEARSHOE
1	1		D4956-23	WEARSHOE
1	1		D4956-35	WEARSHOE
1	1		D4956-39	WEARSHOE
78	78	40	ALS7-1032-130	INSERT (or AKS4-1032-130, ALS4-1032-130, AELS-1032-130)
80	80	42	AN3C4A	BOLT
1	1		AN4C5A	BOLT
1	1	1	NAS1149C0463R	WASHER (AN960C416)
80	80	42	NAS1149C0332R	WASHER (AN960C10L)
2	2	2	CCR264SS3-3	RIVET
2	2	2	CR3212-4-03	RIVET
		1	MS27039C4-05	SCREW

GENERAL NOTES:

1. MATERIAL: N/A

2. FINISH:

ON -041/-043: CHEMICAL CONVERSION COAT PER DART QSI 005 4.1 PRIOR TO INSTALLING D3282-041 WEB PRIME (REF 4.2.1.3.3) OUTSIDE ONLY AND PAINT WHITE PER DART QSI 005 4.2 BLACK ANTI-SKID PAINT AS INDICATED TO 0.5" ABOVE LOCATION RIDGE PER DART QSI 005 4.4

ON -045: CHEMICAL CONVERSION COAT PER DART QSI 005 4.1 PRIOR TO INSTALLING D3282-041 WEB PRIME (REF 4.2.1.3.3) INSIDE AND OUTSIDE PER QSI 005 4.2.1 PAINT BLACK PER QSI 005 4.2.2 USING CA8213/F37038 CAMOFLAGE BLACK PER MIL-PRF-05285E TYPE I CLASS H. BLACK ANTI-SKID PAINT AS INDICATED TO 0.5" ABOVE LOCATION RIDGE PER DART QSI 005 4.4

3. TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.

4. UNITS: INCHES UNLESS OTHERWISE NOTED

5. BREAK SHARP EDGES 0.005 TO 0.010 MAX

6. IDENTIFICATION: N/A

7. WEIGHT: FOR -041/-043 = 37.5 LBS

FOR -045 = 33.4 LBS

8. WELDING TO BE DONE PER DART QSI 004.

9. ALL HOLES DRILLED ON CENTERLINES.

10. DAMAGE TOLERANCE ON FWD BEND:

THERE SHOULD BE NO VISIBLE WRINKLES IN THE BEND FROM THE GROUND TO A HEIGHT OF 7 INCHES ABOVE THE GROUND. IT IS ACCEPTABLE TO POLISH OUT GOUGES UP TO 0.020" DEEP IN THE BENT PORTION OF THE TUBE. A MAXIMUM REDUCTION IN DIAMETER OF 0.150" IS ACCEPTABLE IN THE BENT PORTION OF THE TUBE.

11. BOND D3282-041 FLOAT WEB INTO D3274-1/3 OUTER TUBE WITH NON-STRUCTURAL SIKAFLEX-241/291 ADHESIVE PER DART QSI 015. ENSURE HOLES LINE-UP.

12. DRILL Ø0.297 HOLES FOR ALS7-1032-130 INSERTS USING D3274-1T2 BEFORE FINISH. INSTALL ALS7-1032-130 INSERTS AFTER FINISH. SEAL WEARSHOE BOLTS WITH SIKAFLEX-241/291. ON -045, DO NOT DRILL HOLES OR INSTALL INSERTS FOR LONG WEARPLATES.


13. COAT ALL EXPOSED FASTENERS WITH LPS LABORATORIES "LPS PROCYON" AFTER FINAL ASSEMBLY. CLEAN EXCESS GREASE WITH WASH 'N WIPE DEGREASER.

14. ON -045, APPLY COAT OF ROCKGUARD TO SKIDTUBE WHERE WEARPADS ARE INSTALLED.


SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 149821 MJS
16-08-04

G	ADD -045 CONFIGURATION (FOR PHI) ZN A5-4, A5-6 REVISE NOTE 2, 7 & 12, ADD NOTE 14 (ZN A8-1)	DS	16.04.25
F	REVISE NOTE 2: ADD ANTI-SKID PAINT, REMOVE GASKETS PER IIN-D206-642 REV Q	DB	14.04.15
E	REVISE NOTE 2: FINISH NOW PRIME/PAINT WAS POWDERCOAT, REF. PAR13-256	DW	13.05.17
D	NEW INSERTS, SS WEARSHOE + GASKET	CP	06.12.19
C	ADD -043; NEW INSERTS	CP	05.03.16
B	MOVE SADDLE HOLE: 42.14 WAS 42.76	CP	04.08.09
A	NEW ISSUE	CP	04.03.15
REV.	DESCRIPTION	BY	DATE
DESIGN	CP	DART AEROSPACE USA, INC EUGENE, OR	
DRAWN	RF		
CHECKED	AK	DRAWING NO.	REV. G
MFG. APPR.	JLM	D3274	SHEET 1 OF 6
APPROVED	DS	TITLE	SCALE
DE APPR.		SKIDTUBE ASSEMBLY	NTS
DATE	16.04.25	COPYRIGHT © 2004 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	


RELEASED
2016-07-26
ECN 16-616

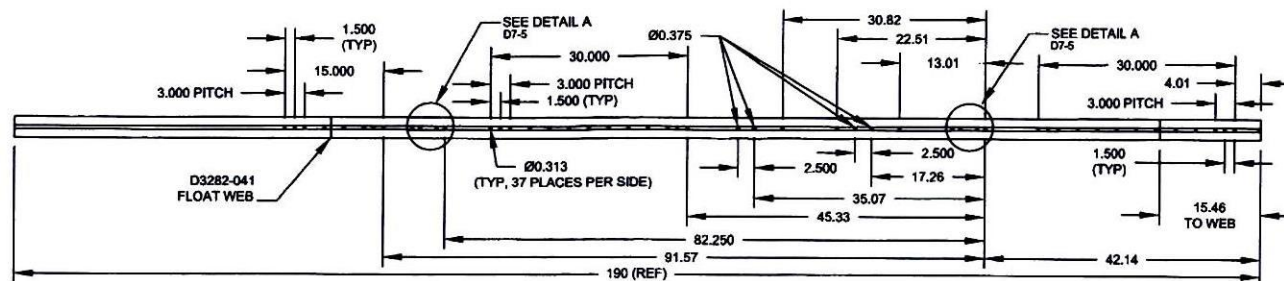

D3274-043 DRILLING/ASSEMBLY DETAIL

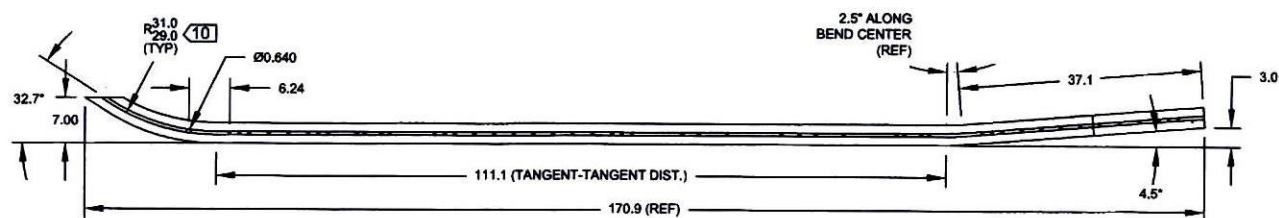


D3274-043 BEND/DRILLING DETAIL

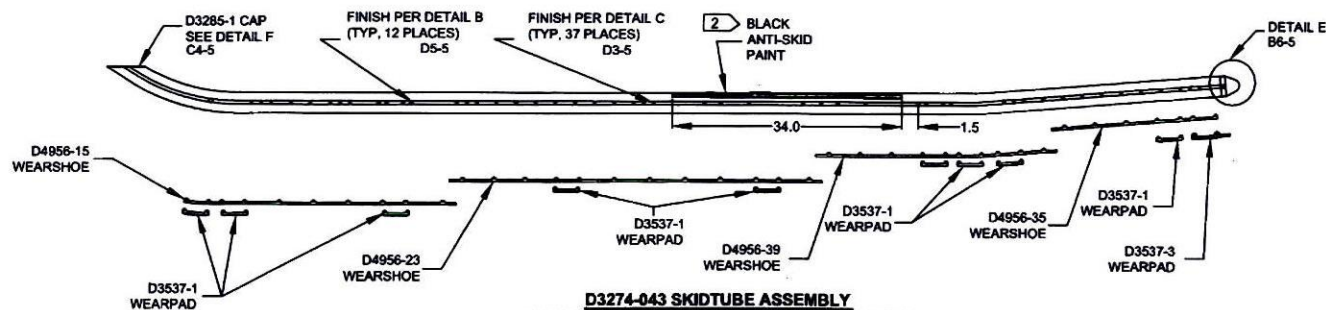


**D3274-043 SKIDTUBE ASSEMBLY
(SEE DETAIL D FOR WEARSHOE INSTALLATION)**

RELEASE
2016-07-26


DESIGN	CP	DART AEROSPACE USA, INC	
DRAWN	RF	EUGENE, OR	
CHECKED	AK	DRAWING NO.	REV. G
MFG. APPR.	JLM	D3274	SHEET 3 OF 6
APPROVED	DS	TITLE	SCALE
DE APPR.	#	SKIDTUBE ASSEMBLY	NTS
DATE	16.04.25	COPYRIGHT © 2004 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL, AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

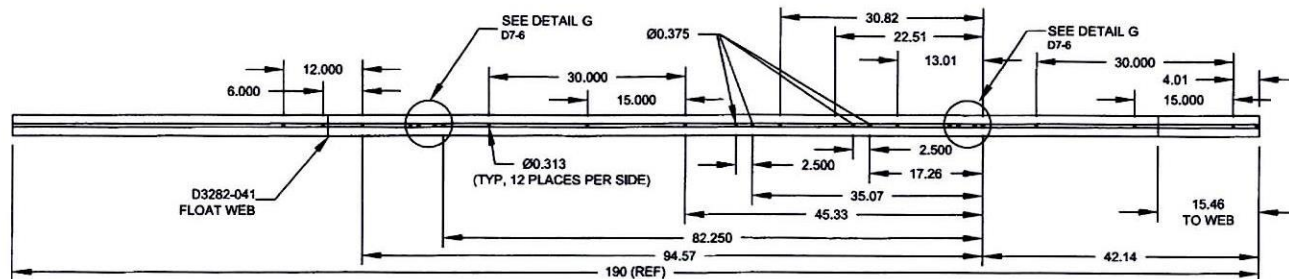

D3274-045 DRILLING/ASSEMBLY DETAIL

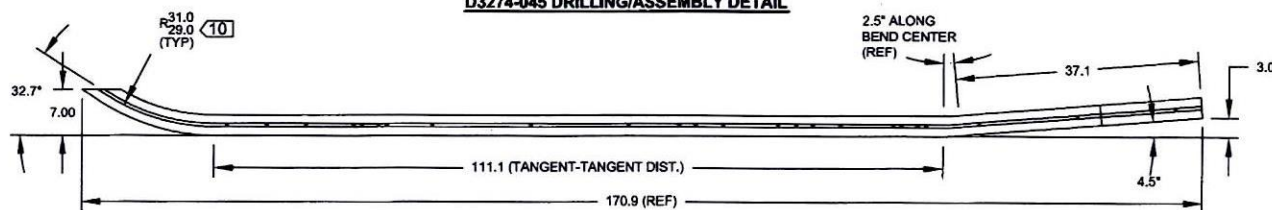

D3274-045 BEND/DRILLING DETAIL

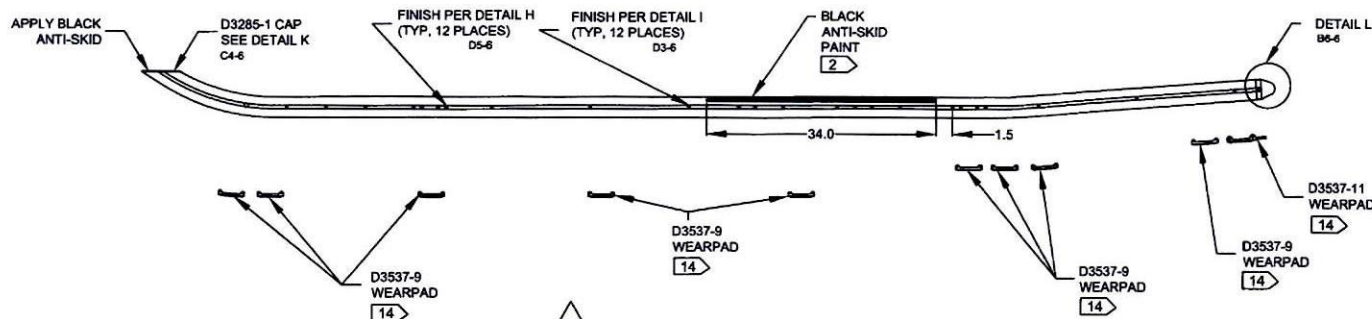


D3274-045 SKIDTUBE ASSEMBLY
(SEE DETAIL J FOR WEARSHOE INSTALLATION)

RELEASED
2016-07-26

DESIGN	CP	DART AEROSPACE USA, INC	
DRAWN	RF	EUGENE, OR	
CHECKED	AK	DRAWING NO. D3274	REV. G
MFG. APPR.	JLM	SHEET 4 OF 6	
APPROVED	DS	TITLE	SCALE
DE APPR.		SKIDTUBE ASSEMBLY	NTS
DATE	16.04.25	COPYRIGHT © 2004 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	


DETAIL A: DRILL DETAIL

D6-2, D3-2, D5-3, D3-3

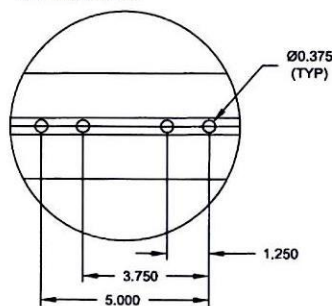**DETAIL B**

B6-2, B5-3

FOR Ø0.375 HOLES ONLY

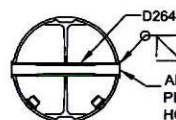


- AFTER DRILLING AND BENDING ASSEMBLY
PERFORM THE FOLLOWING FOR Ø0.375
HOLES ONLY:
1. CHAMFER HOLE 0.030x45°
 2. INSERT D2649 SPACER
 3. WELD INTO PLACE AND GRIND FLUSH
 4. C'BORE TO Ø0.313x0.75 DEEP

DETAIL C

B5-2, B4-3

FOR Ø0.313 HOLES ONLY

CHAMFER 0.030x45°
(TYP)**DETAIL D**

A4-2, A4-3




- ALS7-1032-130 INSERT (1)
AN3C4A BOLT (1)
NAS1149C0332R WASHER (1)
(78 PLACES)

WEARSHOE/WEARPAD (REF)

DETAIL E


B2-2, B2-3

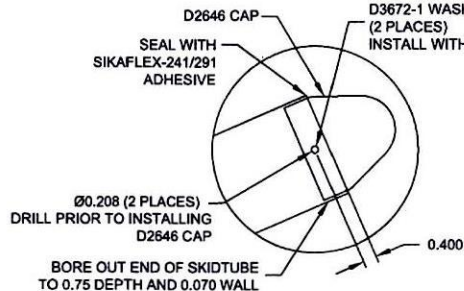

- AN3C4A BOLT (1)
NAS1149C0332R WASHER (1)
D3672-1 WASHER (1)
(2 PLACES)
INSTALL WITH SIKAFLEX-241/291

DETAIL F: END FINISHING DETAIL

B7-2, B7-3

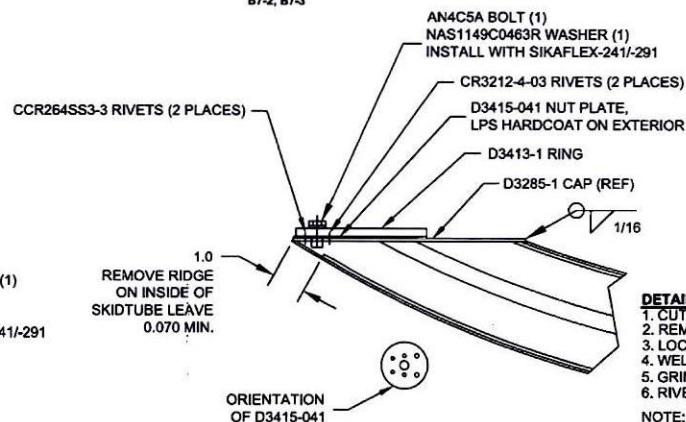
**DETAIL F NOTES**

1. CUT TUBE LEVEL
 2. REMOVE RIDGE ON FWD SIDE
 3. LOCATE D3285-1 (TRIM AS NECESSARY)
 4. WELD D3285-1 IN PLACE PER DART QSI 004
 5. GRIND FLUSH
 6. RIVET D3415-041 NUT PLATE IN PLACE
- NOTE: MASK THREADS IN D3415-041
PRIOR TO FINISH

-041/-043 DETAILS**RELEASED**
2016-07-26


DESIGN	CP	DART AEROSPACE USA, INC	
DRAWN	RF	EUGENE, OR	
CHECKED	AK	DRAWING NO.	REV. G
MFG. APPR.	JLM	D3274	SHEET 5 OF 6
APPROVED	DS	TITLE	SCALE
DE APPR.		SKIDTUBE ASSEMBLY	NTS
DATE	16.04.25	COPYRIGHT © 2004 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

DETAIL G: DRILL DETAIL
D6-4, D3-4

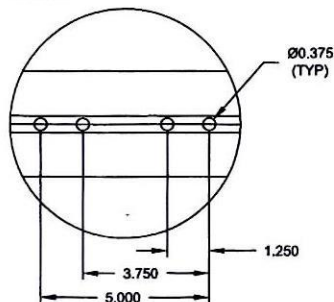

DETAIL H
B6-4


FOR Ø0.375 HOLES ONLY

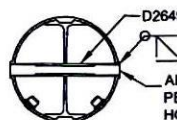

AFTER DRILLING AND BENDING ASSEMBLY
PERFORM THE FOLLOWING FOR Ø0.375
HOLES ONLY:
1. CHAMFER HOLE 0.030x45°
2. INSERT D2649 SPACER
3. WELD INTO PLACE AND GRIND FLUSH
4. C'BORE TO Ø0.313x0.75 DEEP

DETAIL I
B5-4

FOR Ø0.313 HOLES ONLY




CHAMFER 0.030x45°
(TYP)

DETAIL J
A4-4




ALS7-1032-130 INSERT (1)
AN3C4A BOLT (1)
NAS1149C0332R WASHER (1)
(40 PLACES)
WEARPAD (REF)

DETAIL L
B2-4

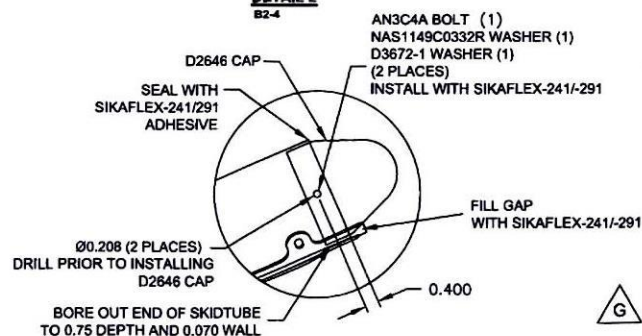

DETAIL K: END FINISHING DETAIL
B7-4

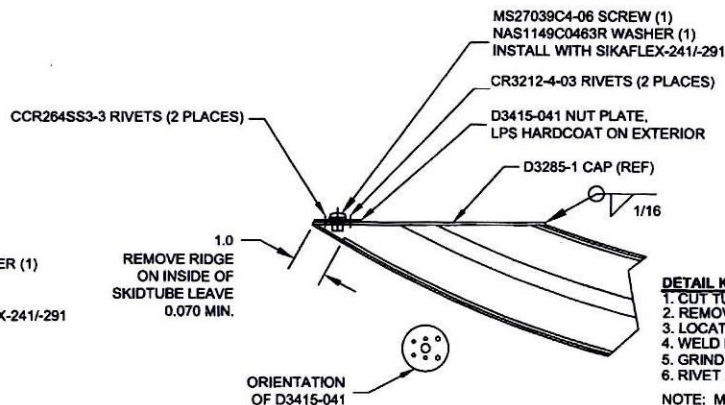

DETAIL K NOTES
1. CUT TUBE LEVEL
2. REMOVE RIDGE ON FWD SIDE
3. LOCATE D3285-1 (TRIM AS NECESSARY)
4. WELD D3285-1 IN PLACE PER DART QSI 004
5. GRIND FLUSH
6. RIVET D3415-041 NUT PLATE IN PLACE
NOTE: MASK THREADS IN D3415-041
PRIOR TO FINISH

G -045 DETAILS

RELEASED
2016-07-26

DESIGN	CP	DART AEROSPACE USA, INC	
DRAWN	RF	EUGENE, OR	
CHECKED	AK	DRAWING NO.	REV. G
MFG. APPR.	JLM	D3274	SHEET 6 OF 6
APPROVED	DS	TITLE	SCALE
DE APPR.		SKIDTUBE ASSEMBLY	NTS
DATE	16.04.25	COPYRIGHT © 2004 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS IIN-D206-642 REV. Q AND INSTRUCTIONS FOR CONTINUED
AIRWORTHINESS ICA-D206-642 REV. 6 OR LATER APPROVED REVISION

REF. FAA STC: SA00475SE
REF. TCCA STC: SH98-4
REF. EASA STC: EASA.IM.R.S.01320

PURPOSE:

TO ADD D206-642-521/-522 SKIDTUBE INSTALLATIONS WITH WEARPADS ONLY AS
PREFERRED BY SOME CUSTOMERS.

PARTS LIST:

PARTS LIST OF SECTION 4.7 OF IIN-D206-642 REV. Q AND SECTION 32.17 OF ICA-D206-642
REV. 6 IS AMENDED AS SHOWN BELOW TO REFLECT THE ADDITION OF D206-642-521/-522/-
561 CONFIGURATIONS.

ITEM	Qty -521	Qty -522	Qty -561	Part Number	Description
	X			D206-642-521	FLOAT SKIDTUBE INSTALLATION, LH
		X		D206-642-522	FLOAT SKIDTUBE INSTALLATION, RH
	1	1	X	D206-642-641 561-4	FLOAT SKIDTUBE
	1	1		D206-648-013	GROUND HANDLING KIT
1			1	D3274-045	SKIDTUBE ASSEMBLY
3			1	D2646	* AFT CAP (1)
4			2	AN3C4A	* BOLT (1)
5A			2	NAS1149C0332R	* WASHER (1)
5B			2	D3672-1	* WASHER (1)
20A			9	D3537-9	* WEARPAD (1)
21A			1	D3537-11	* WEARPAD (1)
26A			40	AN3C4A	* BOLT (1)
26B			40	NAS1149C0332R	* WASHER (1)
26C			40	ALS7-1032-130	* INSERT (1)
34			1	MS27039C4-06	* SCREW (1)
35			1	NAS1149C0463	* WASHER (1)
6	1			D2932-1	SADDLE, FWD OUT, LH
6		1		D2932-2	SADDLE, FWD OUT, RH
7	1			D2933-1	SADDLE, FWD IN, LH
7		1		D2933-2	SADDLE, FWD IN, RH
8	1			D2938-1	SADDLE, AFT OUT, LH
8		1		D2938-2	SADDLE, AFT OUT, RH
9	1			D2939-1	SADDLE, AFT IN, LH
9		1		D2939-2	SADDLE, AFT IN, RH

A	NEW ISSUE	AK	16.05.30
REV.	DESCRIPTION	BY	DATE
DESIGN	AK	DART AEROSPACE USA, INC.	
DRAWN	AK	EUGENE, OR	
CHECKED	AK	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9749	SHEET 1 OF 3
APPROVED	AK	TITLE	SCALE
DE APPR.	AK	ADD -521/-522/-561 SKIDTUBES NTS	
DATE	16.05.30	COPYRIGHT © 2016 BY DART AEROSPACE USA, INC.	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.			

ITEM	Qty -521	Qty -522	Qty -561	Part Number	Description
	X			D206-642-521	FLOAT SKIDTUBE INSTALLATION, LH
		X		D206-642-522	FLOAT SKIDTUBE INSTALLATION, RH
			X	D206-642-561	FLOAT SKIDTUBE
10	8	8		AN3C41A	BOLT
11	16	16		D2652	BUSHING
12A	8	8		MS21043-3	NUT
12B	16	16		D3672-7	WASHER
13	4	4		AN5C11A (or AN5C12A)	* BOLT (2)
14	4	4		AN5C11A (or AN5C13A)	* BOLT (2)
15A	8	8		NAS1149C0532R	WASHER
15B	8	8		D3672-7	WASHER
16	12	12		AN4C6A	BOLT
17A	24	24		D3672-3	WASHER
17B	24	24		NAS1149C0432R	WASHER
18	12	12		MS21043-4	NUT
37	10	10		D2712	SET SCREW
38	2	2		D2934	SADDLE SPACER
39	2	2		D2935	SADDLE SPACER
50	9	9		AN3C36A	BOLT
51	3	3		AN3C35A	BOLT
52	24	24		NAS1149C0332R	WASHER
53	24	24		D3672-1	WASHER
54	12	12		MS21043-3	NUT
55	2	2		D3396-3	SPACER
56A	1	1		AN5C35A	BOLT
56B	1	1		AN5C15A	BOLT
60	2	2		AN5C32A	BOLT
61	2	2		AN5C34A	BOLT
62	4	4		MS21043-5	NUT

- NOTES: (1) DENOTES THAT PART IS INCLUDED WITH D3274-045 ASSEMBLY ABOVE
(2) CHOICE OF BOLT WILL DEPEND ON CROSSTUBE (SEE INSTALLATION PROCEDURE)

DESIGN	AK	DART AEROSPACE USA, INC. EUGENE, OR	
DRAWN	AK		
CHECKED	AK	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9749	SHEET 2 OF 3
APPROVED	AK	TITLE	SCALE
DE APPR.	AK	ADD -521/-522/-561 SKIDTUBES NTS	
DATE	16.05.30	COPYRIGHT © 2016 BY DART AEROSPACE USA, INC. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

INSTALLATION:

INSTALL D206-642-521/-522 SKIDTUBE INSTALLATIONS PER SECTION 3.3 OF IIN-D206-642 REV. Q.

WEIGHT AND BALANCE:

THE WEIGHT AND BALANCE TABLES IN SECTION 5.2.1/5.2.2 OF IIN-D206-642 REV. Q AND SECTION 3.10.2 OF ICA-D206-642 REV. 6 ARE AMENDED TO ADD D206-642-521/-522 CONFIGURATIONS AS SHOWN BELOW:

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D206-642-521 206L/L1/L3/L4 HIGH FLOAT, LH	36.4 lb 16.5 kg	104.1 in 2.64 m	3789 in lb 43.6 m kg	-43.0 in -1.09 m	-1565 in lb -18.0 m kg
D206-642-522 206L/L1/L3/L4 HIGH FLOAT, RH	36.4 lb 16.5 kg	104.1 in 2.64 m	3789 in lb 43.6 m kg	43.0 in 1.09 m	1565 in lb 18.0 m kg
D206-642-521 407 HIGH FLOAT, LH	36.4 lb 16.5 kg	104.1 in 2.64 m	3789 in lb 43.6 m kg	-47.0 in -1.19 m	-1711 in lb -19.6 m kg
D206-642-522 407 HIGH FLOAT, RH	36.4 lb 16.5 kg	104.1 in 2.64 m	3789 in lb 43.6 m kg	47.0 in 1.19 m	1711 in lb 19.6 m kg

MAINTENANCE:

THE NEW D206-642-521/-522/-561 FLOAT SKIDTUBES SHOULD BE MAINTAINED PER ICA-D206-642 REV. 6, OR LATER APPROVED REVISION.

DESIGN	AK	DART AEROSPACE USA, INC. EUGENE, OR	
DRAWN	AK		
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9749	SHEET 3 OF 3
APPROVED		TITLE	SCALE
DE APPR.		ADD -521/-522/-561 SKIDTUBES	NTS
DATE	16.05.30	COPYRIGHT © 2016 BY DART AEROSPACE USA, INC. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	